



# Tell-Tale Crack Monitors



Standard Tell-Tale



Corner Tell-Tale Plus



Displacement Tell-Tale Plus



Tell-Tale Plus

Tell-Tales consist of two plates which overlap for part of their length. One plate is calibrated in millimeters and the overlapping plate is transparent and marked with a hairline cursor. As the crack width opens or closes, one plate moves relative to the other. The relationship of the cursor to the scale represents the amount of movement occurring. Range  $\pm 20$  mm – Resolution 1 mm. The tell-tales are fixed with screws and adhesive across the crack to be monitored.

## standard tell-tale

The Standard Tell-Tale is produced in durable acrylic plastic and is used for monitoring movement across cracks in vertical and horizontal directions on flat surfaces. Coefficient of thermal expansion:  $7 \times 10^{-5} \text{cm/cm}^\circ\text{C}$ .

## corner tell-tale plus

The Corner Tell-Tale Plus is produced in polycarbonate and can be used for monitoring movement across cracks in internal and external corners. The TELL-TALE is hinged for use with internal corners ranging from  $70^\circ$  -  $180^\circ$ . When used in pairs three dimensional movement can be monitored. Coefficient of thermal expansion:  $7 \times 10^{-5} \text{cm/cm}^\circ\text{C}$ .

## displacement tell-tale plus

The Displacement Tell-Tale Plus is produced in PVC rigid sheet and is used for monitoring movement across cracks when one surface moves out of plane with the other. The TELL-TALE monitors out of plane movement. Coefficient of thermal expansion:  $7.3 \times 10^{-5} \text{cm/cm}^\circ\text{C}$ .

## tell-tale plus

The Tell-Tale 'Plus' offers a weather resistant design that monitors the opening or closing of a crack to an accuracy of 1.0 mm, or to an accuracy of  $\pm 0.1$  mm with calipers. Monitor vertical and horizontal movement with supplied crack record sheets. Also offers increased horizontal monitoring range to  $\pm 25$  mm and manufactured in vandal resistant polycarbonate. Fixing slots and "extra grip" surface improves screw and adhesive fixings.



**RST Instruments Ltd.**  
200 - 2050 Hartley Ave.  
Coquitlam, BC  
Canada V3K 6W5

Telephone: 604 540 1100  
Facsimile: 604 540 1005  
Toll Free: 1 800 665 5599



[info@rstinstruments.com](mailto:info@rstinstruments.com)

[www.rstinstruments.com](http://www.rstinstruments.com)

## applications

Used for the measuring widths of active cracks.

## features

- Simple to read.
- Easy installation.
- Low cost.

## ordering info

ITEM	PART #
Standard Tell-Tale	TT0001
Corner Tell-Tale	TT0002
Displacement Tell-Tale Plus	TT0004
Tell-Tale Plus	TT0005