

PLEASE NOTE

The following instructions only apply to water level meters purchased from November 2018 and onwards.

Contact RST for more details.

RST INSTRUMENTS LTD.
11545 Kingston St.,
Maple Ridge, BC
CANADA V2X 0Z5

SALES + SERVICE + MANUFACTURING:
604 540 1100 | info@rstinstruments.com
TOLL FREE (USA & Canada) | 1-800-665-5599

www.rstinstruments.com



Using the Water Level Meter

Turning the unit on:

Press the button briefly. The red LED will turn on. The green LED will flash briefly and the buzzer may operate briefly depending on function. The system will power down after 5 minutes.

Battery status:

While the unit is turned on, the red LED will remain on. If the red LED flashes on start-up and then remains on, the battery is getting low. If the red LED flashes continuously while the unit is on, the battery should be replaced.

Measuring depth to water:

With the unit on, lower the probe toward the water. When the water is reached, the green LED will turn on and the buzzer may operate depending on function.

Changing sensitivity:

Sensitivity of the Water Level Meter can be set and adjusted using the sensitivity knob. Turning the knob clockwise will increase the sensitivity.

Changing the buzzer function:

The buzzer can be silenced. Press the button for 1.5 seconds to enter or leave silent mode. The buzzer will beep once and the green LED will blink twice when entering silent mode. The buzzer will beep once and the green LED will blink once when exiting silent mode.

The buzzer's volume can be adjusted by rotating the mechanical shutter attached to the buzzer.