



***RST INSTRUMENTS*** LTD.

---

# MEMS Tilt Beam Instruction Manual

Copyright ©2012 RST Instruments Ltd. All Rights Reserved.

RST Instruments Ltd.  
11545 Kingston St.,  
Maple Ridge, B.C. Canada V2X 0Z5  
Tel: (604) 540-1100  
Fax: (604) 540-1005  
Email: [info@rstinstruments.com](mailto:info@rstinstruments.com)  
Website: [www.rstinstruments.com](http://www.rstinstruments.com)

---

# MEMS Tilt Beam Instruction Manual

---

Although all efforts have been made to ensure the accuracy and completeness of the information contained in this document, RST Instruments Inc. reserves the right to change the information at any time and assumes no liability for its accuracy.

---

**Product:** MEMS Tilt Beam Instruction Manual

**Document number:** ICM0065B

**Revision:** B

**Date:** May 10, 2010

---

## TABLE OF CONTENTS

<b>1 GENERAL DESCRIPTION</b> .....	<b>1</b>
<b>2 MATERIALS</b> .....	<b>2</b>
2.1 REQUIRED TOOLS/COMPONENTS.....	2
<b>3 INSTALLATION</b> .....	<b>2</b>
3.1 ANCHOR INSTALLATION.....	2
3.2 SINGLE MEMS TILT BEAM INSTALLATION.....	5
3.3 MULTIPLE MEMS TILT BEAM INSTALLATION .....	6
3.4 ELECTRICAL CONNECTIONS .....	8
<b>4 ANALYZING THE DATA</b> .....	<b>9</b>
<b>5 SPECIFICATIONS</b> .....	<b>12</b>
5.1 ENVIRONMENTAL.....	12
5.2 ELECTRICAL.....	12

### LIST OF FIGURES


Figure 1: MEMS Tilt Beam.....	1
Figure 2: MEMS Tilt Beam Details.....	1
Figure 3: Horizontal & Vertical Tilt Beam Concrete Anchor Orientation.....	3
Figure 4: MEMSTilt Beam/Meter General Arrangement .....	4
Figure 5: Single Beam Mounting Details.....	5
Figure 6: Multiple Beam Configurations.....	7
Figure 7: Electrical Connections .....	8
Figure 8: Tilt Data Interpretation .....	10
Figure 9: MEMS Tiltbeam Directional Reading.....	11
Figure 10: Calibration Certificate .....	13

## 1 GENERAL DESCRIPTION

RST Instruments MEMS Sensor Tilt Beam is mounted on vertical or horizontal surfaces and can measure differential angles in the X or Y directions. The Horizontal or Vertical MEMS Tilt Beam system consists of a fiberglass beam with mounting brackets, and a uniaxial MEMS sensor. The Vertical Tilt Beam is capable of uniaxial as well as biaxial MEMS sensors (optional). Because of the excellent zero and range stability, no separate sensor leveling is required- i.e. the enclosure should be mounted as close to level as possible, but no secondary level adjustment is required.



**Figure 1: MEMS Tilt Beam**

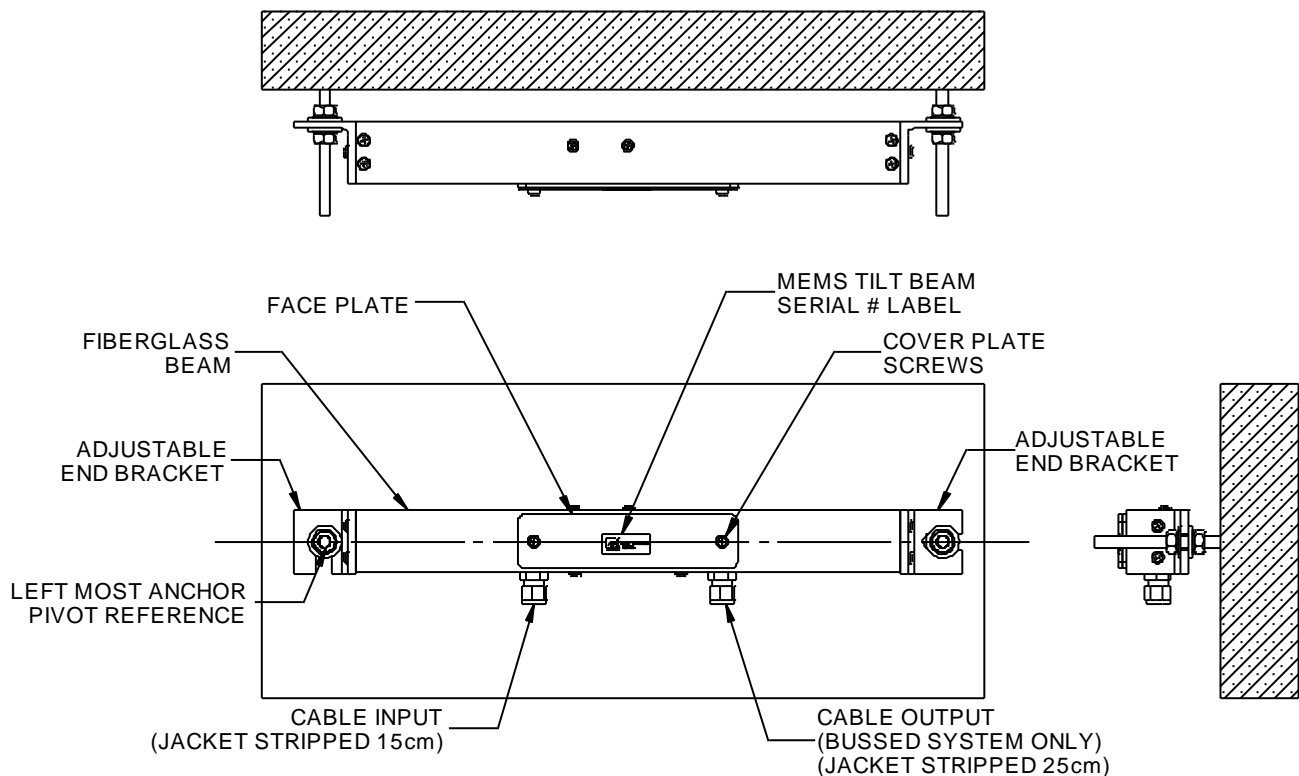

**Figure 2: MEMS Tilt Beam Details**

## 2 MATERIALS

### 2.1 REQUIRED TOOLS/COMPONENTS

Before beginning the installation of the Horizontal or Vertical MEMS Tilt Beam, ensure that all of the components and tools required for installation are present. See the list below for tools and equipment required for a typical installation:

- MEMS Tilt Beam(s)
- (1) Readout (IC6800-V, or FlexDaq 1000/800 Datalogger)
- (1) Level
- (1) Phillips screw driver
- (1) Anchor kit (consisting of (2) 10mm SS anchors, (4) belleville washers, (4) nylon washers, (2) nylon bushing, (4) 10mm SS nuts)
- (2) 16mm wrench

## 3 INSTALLATION

Determine the MEMS Tilt Beam installation location. The location must allow for access inside the beam to connect the sensors after the unit has been mounted. The mounting angles should be securely attached with the supplied hardware to a rigid structure that is free of vibration. Care should be taken to avoid areas of rapid or extreme changes in temperature such as direct sunlight or near heating or cooling equipment. For exposed units, a sun shade and or external insulation is recommended.

The output of the MEMS sensor(s) is in Volts, which can be read with an RST IC6800-V Readout or a FlexDaq 1000/800 Datalogger. The MEMS sensors have excellent zero and full scale stability. As a result, precision sensor zeroing is not necessary. This is in contrast to electrolytic sensors which have high coefficients of thermal sensitivity, necessitating precise leveling on the structure.


### 3.1 ANCHOR INSTALLATION

It is important to install the anchors at a distance equal to the MEMS Tilt Beam mounting angles pattern (using a level, ensure the anchors are installed inline horizontally or vertically) (see figure 3).

The anchors should:

1. Protruding horizontally, in all planes, from the structure (not necessarily perpendicular to the structure)

- In plane (i.e. reading level, if a level were placed across both anchors)
- Allow anchors to set.

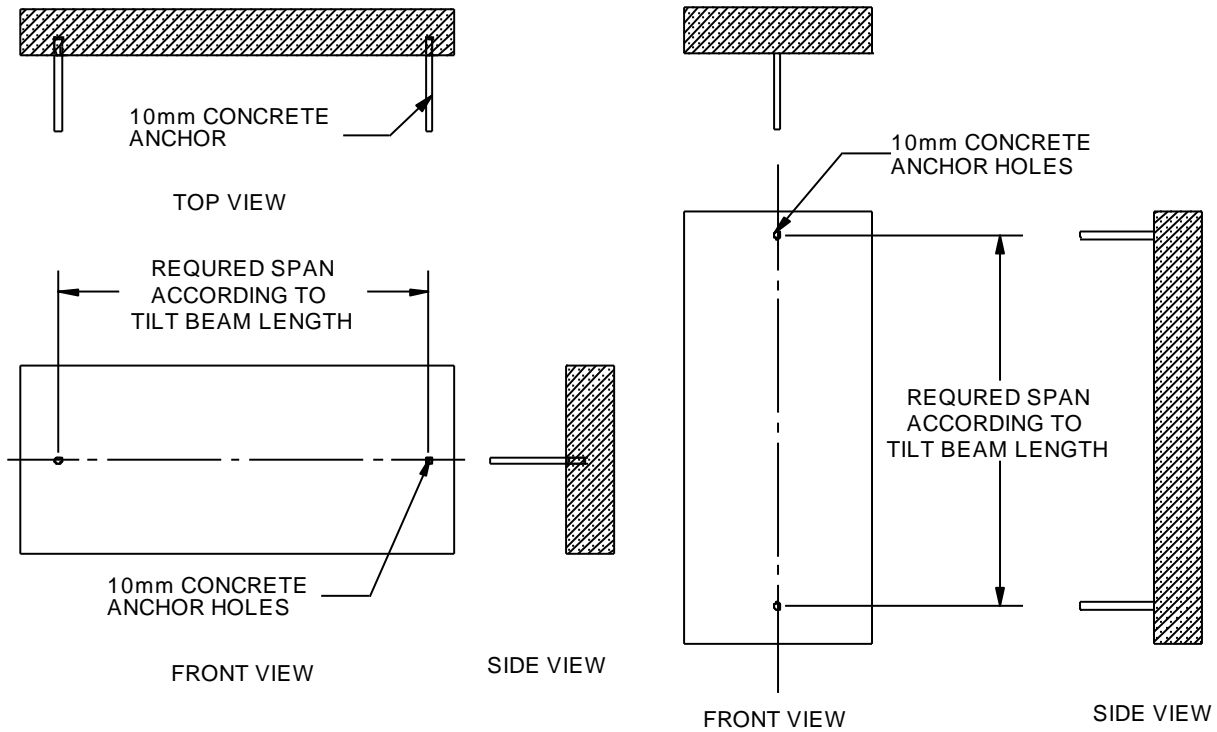


**Figure 3: Horizontal & Vertical Tilt Beam Concrete Anchor Orientation**



### 3.2 SINGLE MEMS TILT BEAM INSTALLATION

Determine the MEMS Tilt Beam installation orientation (i.e. Is the Beam to be installed on the ceiling, wall, or floor). Refer to Figure 4 and adjust mounting brackets accordingly.

1. Thread a 10mm nut onto each anchor until they reach the desired position (ensure the nuts are in plane)
2. Place a Belleville washer over each anchor (see Figure 5)
3. Place a Nylon washer over each anchor
4. Place a Nylon bushing over each anchor
5. Slide the MEMS Tilt Beam onto the Nylon Bushings
6. Place a Nylon Washer over each anchor
7. Place a Belleville washer over each anchor (see Figure 5)
8. Thread a 10mm nut onto each anchor, finger tight, and ensure that the Beam is horizontal or vertical
9. For a **single** beam installation, where (2) Belleville washers are used per anchor, turn the nut 2-3 wrench flats ( $120^{\circ}$ - $180^{\circ}$ ) (see Figure 5)
10. For a **double** beam installation, where (4) Belleville washers are used per anchor, turn the nut 4-5 wrench flats ( $240^{\circ}$ - $300^{\circ}$ ) (see Figure 5)

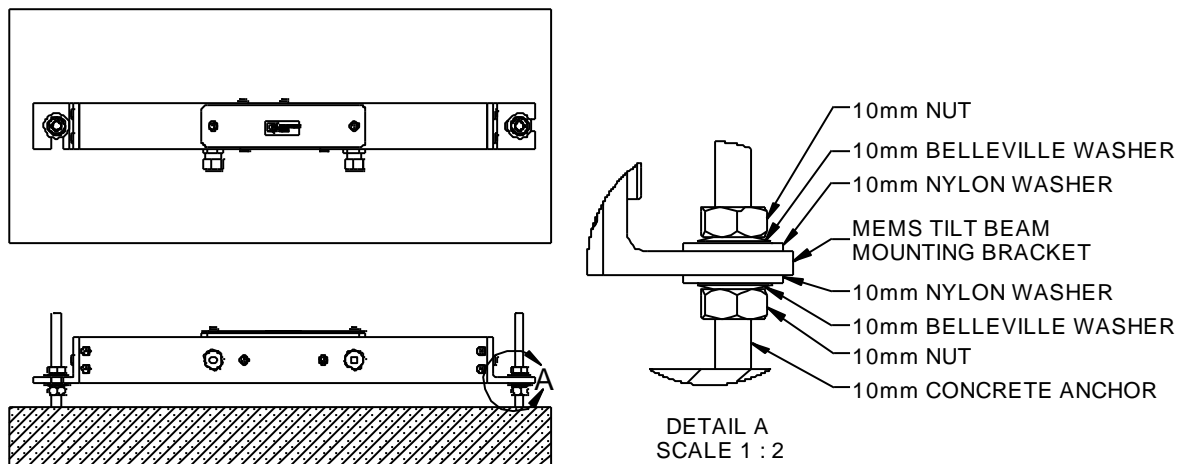

**Figure 5: Single Beam Mounting Details**



### 3.3 MULTIPLE MEMS TILT BEAM INSTALLATION

Determine the MEMS Tilt Beam installation orientation (i.e. Is the Beam to be installed on the ceiling, wall, or floor). Refer to Figure 4 and adjust mounting brackets accordingly. Ideally, the beams should be staggered (see Figure 6).

There are two ways to complete this installation:


- Installing the odd beams first and then the even beams afterwards
- Or, install one beam at a time in succession, by placing beams on top and then in behind.

In either case, you should end up with a staggered installation as shown in Figure 6.

The following installation procedure is for installing one beam at a time in succession.

1. Thread a 10mm nut onto the first two anchors until they reach the desired position (ensure the nuts are in plane, not necessarily the same distance from the wall as the wall may be bowed)
2. Place a Belleville washer over the 1<sup>st</sup> and 2<sup>nd</sup> anchors (see Figure 6)
3. Place a Nylon washer over the 1<sup>st</sup> and 2<sup>nd</sup> anchors
4. Place a Nylon bushing over the 1<sup>st</sup> and 2<sup>nd</sup> anchors
5. Slide the MEMS Tilt Beam onto the Nylon Bushings
6. Place a Nylon Washer over the 1<sup>st</sup> and 2<sup>nd</sup> anchors
7. Place a Belleville washer over the 1<sup>st</sup> and 2<sup>nd</sup> anchors (see Figure 5 or 6)
8. Thread a 10mm nut onto the 1<sup>st</sup> anchor, finger tight, and ensure that the Beam is horizontal or vertical
9. Tighten the nut 2-3 wrench flats (120°-180°)
10. Thread a 10mm nut onto the 3<sup>rd</sup> anchor (position nut so that the next beam when installed will be parallel to the previously installed beam (see Figure 6)
11. Place a Belleville washer and then a Nylon washer and Nylon Bushing over the nut installed in step 10 (see Figure 6)
12. Place a Belleville washer and then a Nylon washer and Nylon Bushing over the Belleville washer on the 2<sup>nd</sup> anchor (see Figure 6 for orientation of washers)
13. Slide the MEMS Tilt Beam onto the 2<sup>nd</sup> and 3<sup>rd</sup> anchors, adjust the nut on the 3<sup>rd</sup> anchor until the beam is parallel
14. Place a Nylon Washer, and then a Belleville washer over the 2<sup>nd</sup> and 3<sup>rd</sup> anchor
15. Place a Nylon bushing over the 2<sup>nd</sup> and 3<sup>rd</sup> anchor
16. Thread a 10mm nut onto the 2<sup>nd</sup> anchor, finger tight, and ensure that the Beam is horizontal or vertical
17. Tighten the nut 4-5 wrench flats (240°-300°)
18. Repeat steps 10-17 incrementing anchor references by 1 (i.e. in step 10, the 3<sup>rd</sup> anchor would now become the 4<sup>th</sup> anchor etc.)

The beams when installed should be staggered and the washers and nuts should be installed as shown in Figure 6.

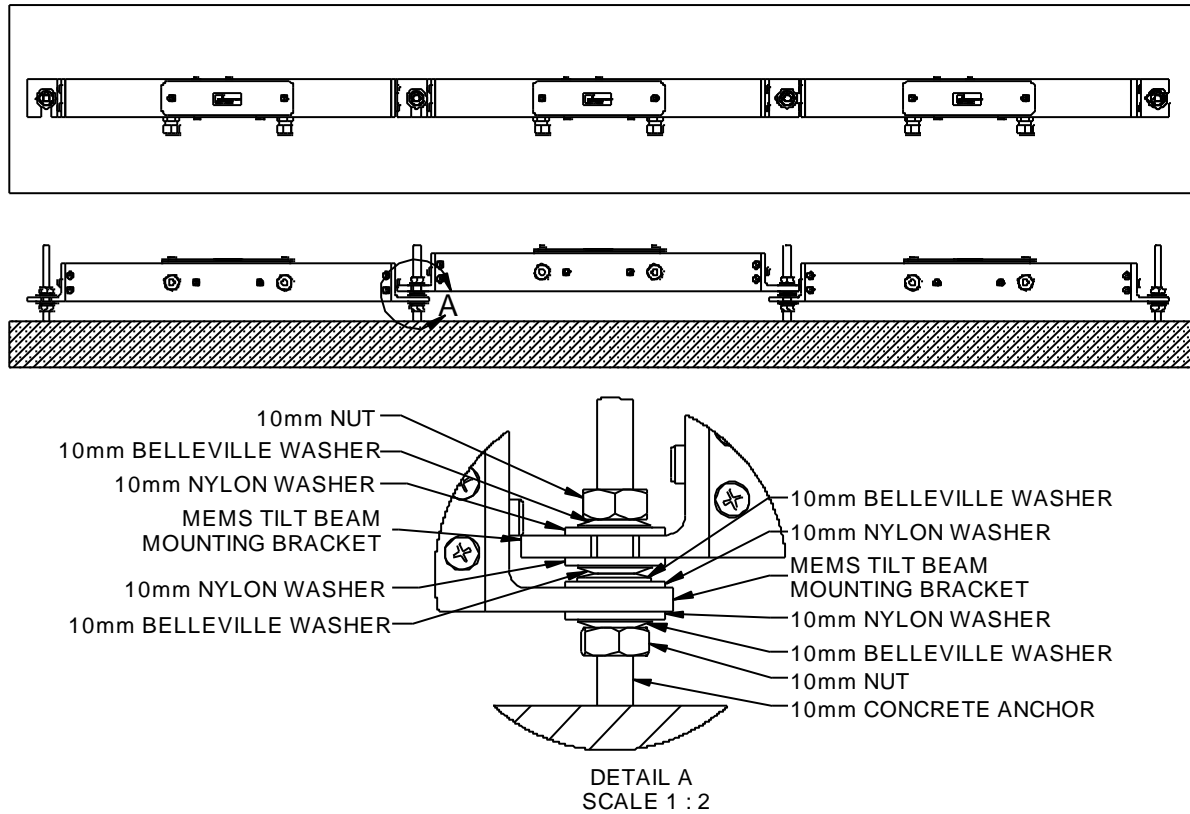

**Figure 6: Multiple Beam Configurations**

### 3.4 ELECTRICAL CONNECTIONS

1. Under the Colour Code Table, look up the lead designations for the type of cable being used.
2. Under the Electrical Connections Table, make the appropriate lead connections, according to the type of system being used.
3. Horizontal and Vertical Tilt Beam system measure the A-axis (Green & White). Vertical Tile Beam system is capable of measuring the B-axis (optional) (Orange & Blue).

Information regarding your sensor configuration and cable type is listed below and on your Calibration Certificate.



**Figure 7: Electrical Connections**

Tiltmeter	Wire Color	Terminal	Datalogger
12V	Red	1	12V
Gnd	Black	2	Gnd
A+	Green	3	xH
A-	White	4	xL
B+	Orange	5	yH
B-	Blue	6	yL

Note: For **BUSSED** Systems only, use the cable with the jacket stripped 25mm back for the Cable Output.

## 4 Analyzing the Data

Each MEMS Tilt Beam is identified by a Serial Number, and has a corresponding Calibration Certificate (See Sample Calibration Certificate). To convert the sensor signal into meaningful data, simply substitute the values from the readings and the Calibration Constants into the following formula:

$$\mathbf{Sin \alpha = m(V-b)}$$

Where

- **V** is the Tiltmeter Output signal.
- **m** is the predetermined Calibration Constant.
- **b** is the predetermined Calibration Constant.

The sensing principle of the MEMS Tilt Beam is that of an accelerometer with the sensitive axis is oriented horizontally. The measured phenomenon is then the component of gravity transverse to the sensitive axis, i.e.


$$a = g \text{ sine}(\alpha)$$

Commonly, MEMS Tilt Beam data are interpreted as linear motion – i.e. rotation about a presumed radius gives an equivalent motion. In many cases, where the ultimate variable of interest is lateral displacement at some presumed radius due to rotation, the accelerometer result can be simply rescaled, i.e.

$$x = r \text{ sine}(\alpha)$$

$$= \frac{r a}{g}$$

In the case of a uniaxial MEMS Tilt Beam, radius (r) is the beam length. For MEMS Tilt Beam on rigid bodies, the radius must be chosen with some care.

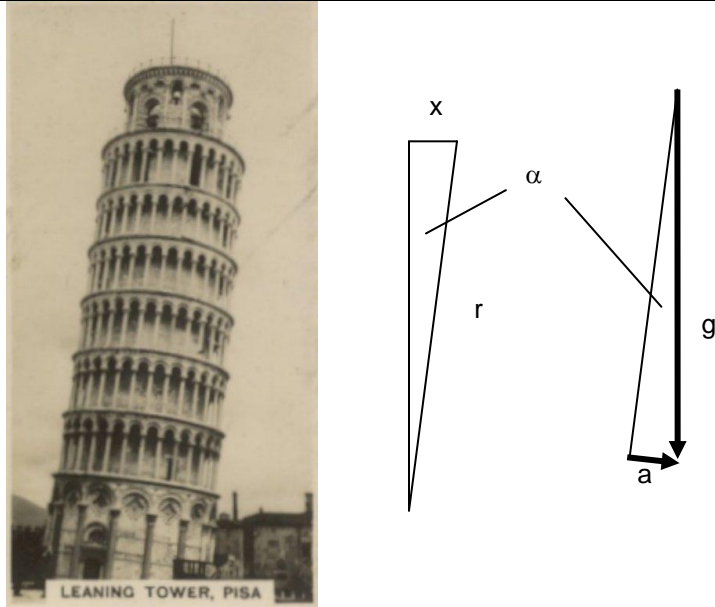


**Figure 8: Tilt Data Interpretation**

In cases where the actual angle is sought, the arcsine function or a polynomial equivalent may be used:

$$\alpha = \arcsine(a/g)$$

It should be noted that measuring “dynamic tilt” may be a concept error: the lateral dynamic accelerations may exceed the tilt accelerations

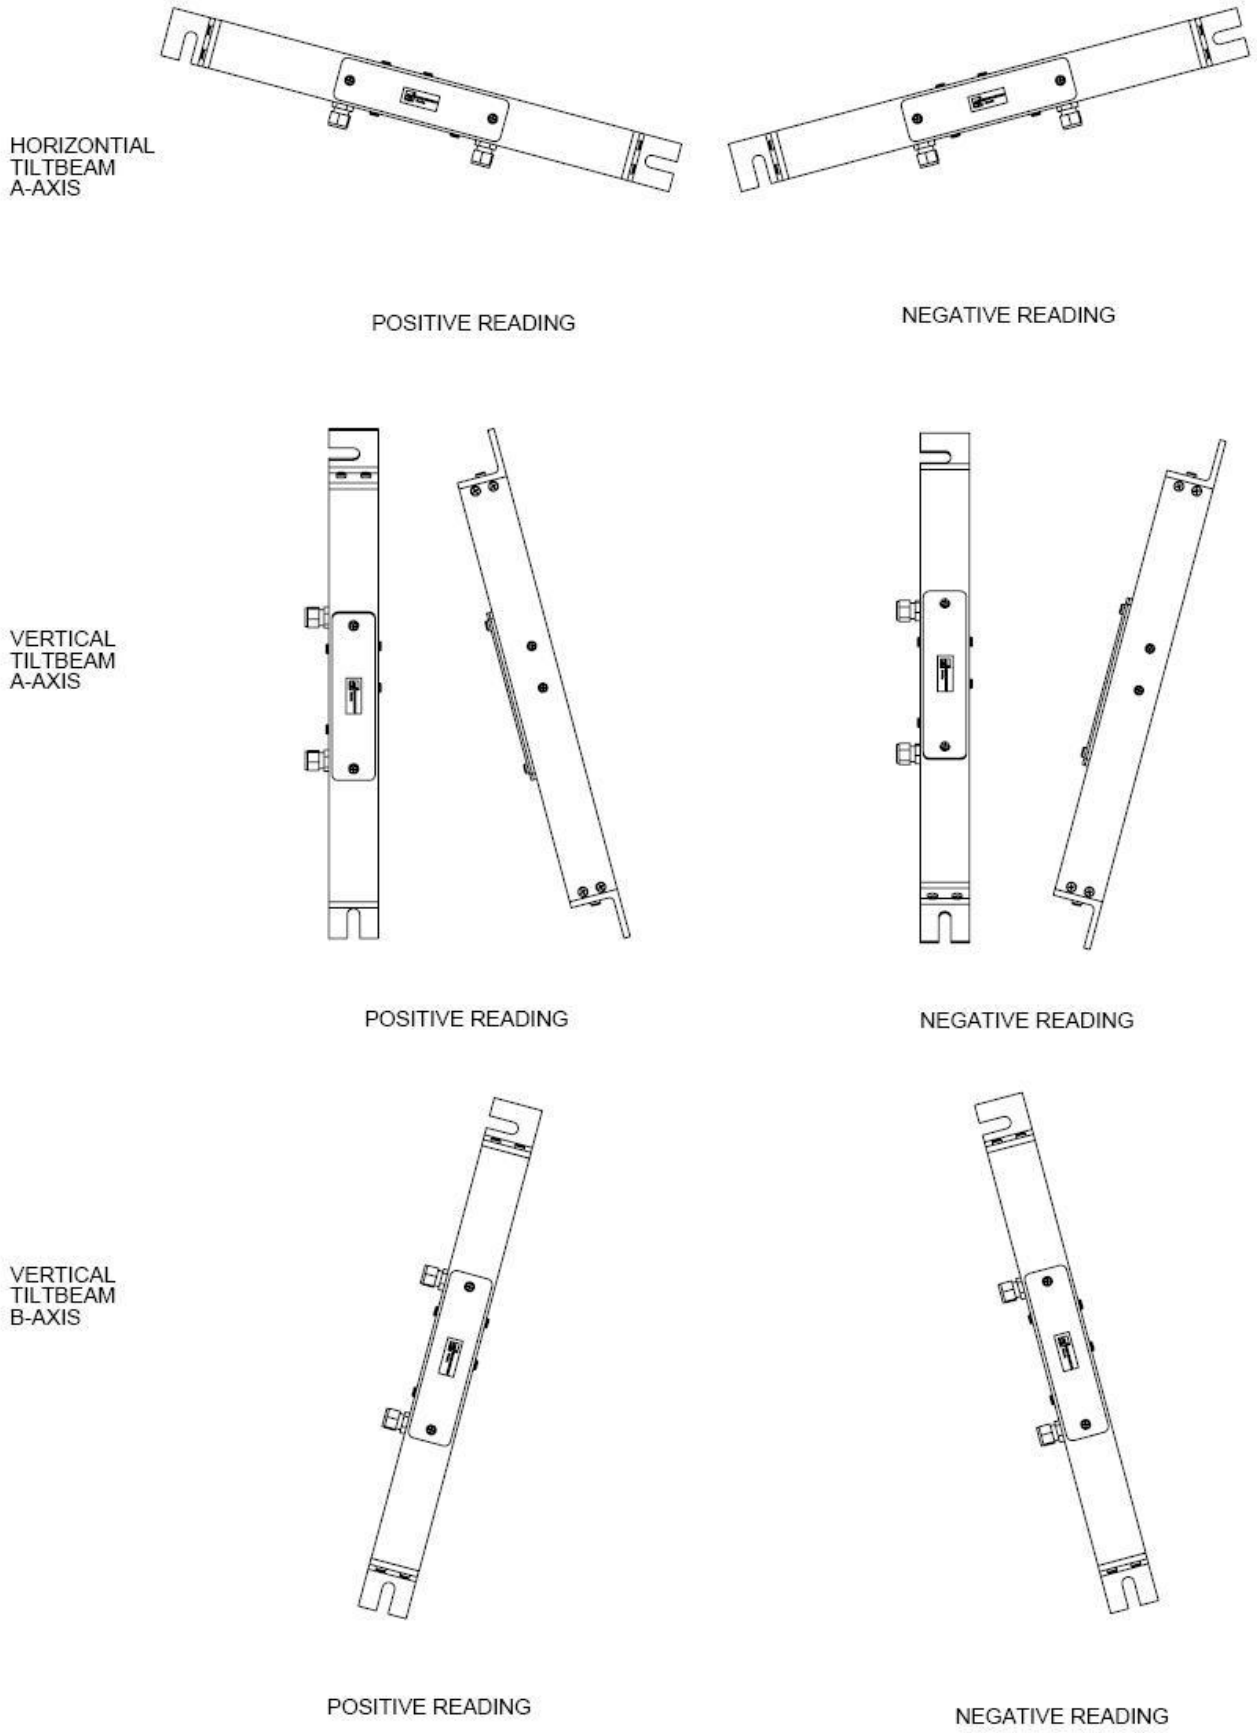

**Figure 9: MEMS Tiltbeam Directional Reading**

## 5 Specifications

<b>5.1 ENVIRONMENTAL</b>	
Operating temperature	-40°C to +80°C
<b>5.2 ELECTRICAL</b>	
Sensor	One/Two MEMS Tilt Sensor(s)
Range	± 15 Degree Standard
Resolution	0.0013 Degree
Null Repeatability	<0.004 Degree
Signal Cable	22 Gauge Shielded Twisted
Datalogger	FlexDaq 1000/800
Analog Readout	IC6800-V



## Calibration Record

200 - 2050 Hartley Ave., Coquitlam, British Columbia, Canada V3K 6W5  
 Tel: 604.540.1100 • Fax: 604.540.1005 • Toll Free: 1.800.665.5599 (North America only)  
 e-mail: info@rstinstruments.com • Website: www.rstinstruments.com

### MEMS Horizontal Tilt

Customer: RST  
 Serial Number: 00000  
 Model: IC6015  
 Work Order Number: Q000000

Date: 14-Sep-09  
 Beam Length: 2 m  
 Cable Length: 30 m  
 Cable Type: EL380004

References:  
 Calibration Frame E0105  
 CR1000 Logger 17291  
 Referenced Annually To National Standards.

Wire	Description	Terminal Position
Red	P+	1
Black	P-	2
Green	A+	3
White	A-	4

Applied Angle (Deg)	Applied Angle (Sin)	Tiltmeter Output (V)	Calculated Angle (Sin)
5	0.0872	1.689	0.0872
4	0.0698	1.408	0.0698
3	0.0523	1.128	0.0523
2	0.0349	0.848	0.0349
1	0.0175	0.568	0.0174
0	0.0000	0.287	0.0000
-1	-0.0175	0.008	-0.0174
-2	-0.0349	-0.272	-0.0348
-3	-0.0523	-0.552	-0.0523
-4	-0.0698	-0.832	-0.0697
-5	-0.0872	-1.113	-0.0872

$$\sin \alpha = m(V-b)$$

$$m = 0.062256$$

$$b = 0.28790$$

For A axis : Positive angle = Right side tilts down

Calibrated By: J. Chu

**Figure 10: Calibration Certificate**